

$C \wedge R B O N$

XX TRAIL





USER MANUAL

PRODUCT CODE WA02010033



INTRODUCTION

The proLite Carbon X-TRAIL is an ultra-lightweight carbon frame rollator expertly built to last. Added suspension, disc brakes and increased castor size make this rollator the ideal companion for both indoor and outdoor use, reducing frame vibrations and increasing user independence.

READ BEFORE USE:

Before you begin using your rollator, please ensure you, and any persons that may assist you in its use, take the time to read, understand and follow the instructions given within this manual carefully. We recommend that you keep this user manual in a safe place for future reference.

Please note: We are continuously improving the quality and reliability of our products and therefore reserve the right to amend this user manual without notice.

If you have any questions about wheelchair use, maintenance, or safety, please contact CareCo:

CareCo (UK) Limited, 1 Turing Court, Great Notley, Braintree, CM77 7AT,

Tel: 0333 015 5000 www.CareCo.co.uk

Thank you for choosing CareCo.



Visually impaired users can view this manual in PDF format at the following URL:

www.careco.co.uk



USAGE

This rollator is intended for users who experience difficulty in walking and/or have reduced mobility.

Unauthorized modifications and/or installation of unapproved 3rd party components and accessories are not permitted.

This rollator is suitable for indoor and outdoor use.

EXPECTED LIFETIME

The expected lifetime of this product is 5 years, provided the product is used for its intended purpose and all maintenance and care instructions are followed.

Proper maintenance, handling with care and repairs (if necessary), will significantly extend the product lifetime. Improper use of the product will reduce the expected lifetime.

The expected lifetime is not related to the product warranty.

PRODUCT IDENTIFICATION

The product identification label is located on the cross-frame underneath the seat.

PARTS DESCRIPTION



- 1. Hand grip
- 2. Height Adjustable Armrest
- 3. Cup Holder
- 4. Cane/Walking Stick Holder
- 5. Hand Grip Reflector
- 6. Brake Lever
- 7. Height Adjustment Button
- 8. Back Rest
- 9. Seat
- 10. Bag
- 11. Coil Spring
- 12. Front Wheel
- 13. Disc Brake
- 14. Rear Wheel



MAXIMUM WEIGHT CAPACITY: 150 KG (23.5st)

MAXIMUM CARRY BAG LOAD: 5 KG



SAFETY INSTRUCTIONS

- Only use the rollator for its intended use, incorrect use can lead to hazardous situations.
- Only use the rollator on even and solid surfaces
- Do not overfill the product bag –Maximum load 5KG
- Prolonged exposure to hot or cold temperatures can cause parts of the rollator to become hot or cold.
- Do not use the rollator as a transportation device
- Replace damaged or significantly worn parts if and when required.
- Periodically test the brakes to ensure safe use.
- Do not sit on the rollator when on an incline or uneven ground

FOLDING & UNFOLDING





UNFOLDING

Position the rollator upright on its wheels.

Unfold the rollator by pressing down on the tubes (A)

An audible "click" will confirm the rollator is secure.

FOLDING

Position the rollator upright on its wheels.

Fold the rollator by pulling upwards on seat handle (B)

Push the handles of the rollator together.

An audible "click" will confirm the rollator is secure.



Keep hands and body away from cross frame pivot to avoid possible pinch points Ensure the rollator is secure before use



HANDLE HEIGHT ADJUSTMENT

To adjust the handle height, open the handle bracket clasp (A).

Press and hold button (B) whilst pulling upwards simultaneously.

When the handle is at the desired height, release button (B).

The handle will locate to the nearest height setting and an audible "click" will confirm the handle is secure.

Close the handle bracket clasp.

Repeat on the other side.



<u>(i</u>

Ensure both handles are level before using the rollator.

APPLYING THE BRAKES

Stopping

Gradually squeeze both brake levers to stop the rollator. Release the brake levers to start moving again.

Turning

Squeeze the left and right brake levers individually to rotate the rollator.

Release the brake lever to stop rotating.

Locking

Push both brake levers downwards to apply the brake lock. An audible "click" will confirm the brakes are secure.

Unlocking

Pull both brake levers upwards to unlock the brakes.







Ensure the rollator is stationary when locking the brakes.

Regularly test the brakes to ensure they function correctly.

BACKREST

The backrest can be adjusted to the desired height using the left and right thumbscrews on the backrest fixture.

Tighten the screw by turning it clockwise Loosen the screw by turning it anticlockwise



Ensure the backrest is level and secure before using the rollator as a seat.



SITTING

Ensure the rollator is on a flat and even surface and the locking brakes are applied.



♠ Do not lean backwards when using the rollator as a seat.

Do not use the product as a transportation device.



HANDLING & TRANSPORTING

Carry the rollator using the rubber handles and/or areas of the frame that are clear of pinch points.



BAG

ATTACHING

Attach the bag to the rollator by inserting the bag clips into the bag mounts on the frame.



REMOVING

Remove the bag from the rollator by lifting the bag carry handles away from the frame.



WALKING STICK/CANE & CUP HOLDER

Attaching

Attach the holder retaining clip to the rollator frame.

Removing

Remove the holder by lifting the retaining clip away from the frame.



ADJUSTMENTS

BRAKE CABLE ADJUSTMENT

Difficulty Level





The user can adjust the tension of the brake cable by rotating the thumbscrew located by the rear wheel.

SUSPENSION ADJUSTMENT

Difficulty Level





Tools Required

17mm Spanner x1 19mm Spanner x1

The user can adjust the stiffness of the front suspension using simple household tools.

Adjust the locknut (A) using a 19mm spanner whilst holding the 17mm spanner firmly on the fork locking nut (B).





CLEANING & HYGIENE

To keep the rollator in optimal condition, it should be cleaned regularly with a damp cloth and/or mild soap. Do not use abrasive cleaners/materials.

Dry the rollator after cleaning and after use in bad weather conditions.



MAINTENANCE

By performing simple maintenance, the user can extend the life expectancy of the rollator.

- Check fasteners regularly and tighten if necessary
- Check tyre condition regularly
- Check brake functionality
- Check wheels move freely
- Check upholstery for wear

SPECIFICATIONS

Overall height (mm)	890
Overall length (mm)	820
Overall Width (Mm)	670
Folded Height (Mm)	890
Folded Length (Mm)	820
Folded Width (Mm)	260
Seat height (mm)	590
Seat width (mm)	455
Seat depth (mm)	220
Height adjustable range (mm)	890-980
Front wheel size (inch)	12
Rear wheel size (inch)	9.5
Shopping bag size - W/H/D (mm)	230 x 220 x 80
Outer carton size (mm)	810 x 300 x 910
Weight of shopping bag (kg)	0.42
Loading weight for shopping bag (kg)	5
Net weight (kg)	8.5
Carry weight (kg)	8.05
Maximum user weight (kg)	150/kg
Frame material	Carbon fiber
Wheel material	PP+PU
Handle material	N/A
Shopping bag material	PVC+Grid cloth
Seat material	PVC
Tyre type	Solid PU tyre
Suspension	Front Suspension

WARRANTY

If a component requires repair or replacement due to a specific manufacturing or material defect within its warranty period, it will be repaired or replaced free of charge by CareCo.



• FRAME: 5-YEAR LIMITED WARRANTY

• DURABLE PARTS: 1-YEAR LIMITED WARRANTY

Consumables are not covered under normal warranty circumstances unless they have clearly suffered excessive wear or damage as a direct result of a manufacturing defect. These items include grips, tyres, and rubber accessories.

The guarantee for the rollator is not transferable.

Parts that have been previously replaced that require subsequent repair or replacement due to manufacturing defects will be honoured for the remainder of the rollators warranty period.

Parts that have been purchased by the end user after the original warranty period has expired have a warranty period of 12 months.

CareCo is not responsible if the rollator requires repair or replacement as a direct result of:

- Changes or modifications made to the product that fall outside of the manufacturer's specifications
- The product not being serviced or maintained according to the manufacturer's recommendations contained in this user manual.
- Negligence, Accidental Damage, and Improper use
- Repairs attempted before CareCo have been notified
- The product being purposely damaged or mistreated

In the unlikely event that this product is recalled, CareCo will notify the user.

Please ensure that your contact information is up to date.



RECYCLING & DISPOSAL

Disposal or recycling of the rollator should be completed through an approved distributor or disposal facility. (Local disposal & recycling regulations may apply)

Alternatively, contact CareCo for advice on disposal.

Materials:

PART	MATERIAL
Frame	Carbon fiber
Backrest	Leather
Pull handle on seat	Nylon
Shopping bag	PVC & mesh cloth
Seat	PVC
Hand grip	PVC
Height adjustment clip	Plastic
Hand brake	Plastic
Brake handle	Plastic
Stepper	Plastic
Cup holder	Plastic
Stick holder	Plastic
Front wheel	Plastic + PU tyre
Rear wheel	Plastic + PU tyre
Cross brace	Aluminum
Disk brake	Aluminum alloy and stainless Steel
Push handle	Plastic & aluminum
Front fork	Aluminum
Front suspension	Stainless steel

Packaging:

Cardboard Box, Low-Density polyethylene bag

CARBON TRAIL







