

PRODUCT CODE: MS08050027



Replacing the Shrouds

Difficulty Level





You will need: 1x Pozi Screwdriver (Not Included)

FRONT SHROUDS



1. Using a Pozi screwdriver, unscrew the front shrouds from the scooter body, then lift them away from the scooter.



2. Place the new shrouds into position, then secure them in place using a Pozi screwdriver.

SIDE SHROUDS



1. Using a Pozi screwdriver, unscrew the side shrouds from the scooter body, then lift them away from the scooter.



2. Place the new shrouds into position, then secure them in place using a Pozi screwdriver.

REAR SHROUDS



1. Pry the rear shrouds away from the scooter body.



2. Press the new shrouds into position.

