



## MS09113.04 - 4ft Clever Multi-Fold Ramp

### User Instructions:

#### Product Specifications (MS09113.04)

Max Weight Capacity	270kg
---------------------	-------

1. To determine the length of ramp for your application, first you need to determine the rise. The rise is the vertical measurement between the ground and where the top of the ramp is going to sit.
2. A 1:6 slope (9.5 degree) is an acceptable grade for portable ramps used by occupied chairs and scooters with a qualified assistant. i.e. For a 1ft rise you need a 6ft ramp, for a 1.5ft rise you will need a 9ft ramp etc.
3. This ramp is designed to assist persons to travel on a small incline while using a wheeled walker or wheelchair.

### Operation Guidance:

1. Loading the wheelchair
  - Position the wheelchair in the direction of the ramp with the front wheels forward. Roll or ride the wheelchair slowly and steadily up the ramp, ensuring that the wheels follow the centre of the ramp
  - Take extra care in wet conditions to ensure the wheels do not slide on the ramp
2. Unloading the wheelchair
  - Position the ramp directly behind the rear wheel of the wheelchair. Allow the wheelchair to roll backwards down the ramp, ensuring the wheels follow the centre of the ramp
  - Always have a qualified assistant present when using the ramp.

### Maintenance:

1. It is the user's responsibility to check the loading ramp and components before each and every use. If the ramp is damaged, it should NOT be used.
2. Maintain the ramp by regular cleaning. Periodically lubricate the hinges.

## Assembly:

1. Consideration must be taken if the ground is not level and slopes away from the rise where the ramp will be placed.
2. All ramps should be used only with assistance of a knowledgeable and capable caregiver.
3. Never exceed the rated capacity of your ramp.
4. Use caution at all times when loading and unloading.
5. Only load and unload on a stable and level surface.
6. Never stand in the path of equipment or vehicles.
7. Do not leave the ramp unattended.
8. Ramp surfaces will have less traction when wet - use caution.
9. Always fold and secure the ramp before carrying.
10. Always follow manufacturers recommendations for chair or scooter.
11. Do not exceed a 1 in 6 gradient.

## Warranty:

Your Ramp is under warranty to be free from defects in material and workmanship for one year from date of purchase. This warranty expresses our confidence in the workmanship and materials used for our products.

In the event of a defect covered by this warranty, CareCo will, at our discretion, replace the product or supply parts to remedy. This warranty does not cover device failure due to owner misuse or negligence, or due to normal wear and tear. The warranty does not extend to non-durable parts, such as rubber accessories, which are subject to normal wear and tear and require periodic replacement. If you have any queries please contact CareCo.

### **Authorised Distributor:**

---

CareCo, Hubert Road, Brentwood,  
Essex CM14 4JE  
[www.careco.co.uk](http://www.careco.co.uk)



## MS09113.05 - 5ft Clever Multi-Fold Ramp

### User Instructions:

#### Product Specifications (MS09113.05)

Max Weight Capacity	270kg
---------------------	-------

1. To determine the length of ramp for your application, first you need to determine the rise. The rise is the vertical measurement between the ground and where the top of the ramp is going to sit.
2. A 1:6 slope (9.5 degree) is an acceptable grade for portable ramps used by occupied chairs and scooters with a qualified assistant. i.e. For a 1ft rise you need a 6ft ramp, for a 1.5ft rise you will need a 9ft ramp etc.
3. This ramp is designed to assist persons to travel on a small incline while using a wheeled walker or wheelchair.

### Operation Guidance:

1. Loading the wheelchair
  - Position the wheelchair in the direction of the ramp with the front wheels forward. Roll or ride the wheelchair slowly and steadily up the ramp, ensuring that the wheels follow the centre of the ramp
  - Take extra care in wet conditions to ensure the wheels do not slide on the ramp
2. Unloading the wheelchair
  - Position the ramp directly behind the rear wheel of the wheelchair. Allow the wheelchair to roll backwards down the ramp, ensuring the wheels follow the centre of the ramp
  - Always have a qualified assistant present when using the ramp.

### Maintenance:

1. It is the user's responsibility to check the loading ramp and components before each and every use. If the ramp is damaged, it should NOT be used.
2. Maintain the ramp by regular cleaning. Periodically lubricate the hinges.

## Assembly:

1. Consideration must be taken if the ground is not level and slopes away from the rise where the ramp will be placed.
2. All ramps should be used only with assistance of a knowledgeable and capable caregiver.
3. Never exceed the rated capacity of your ramp.
4. Use caution at all times when loading and unloading.
5. Only load and unload on a stable and level surface.
6. Never stand in the path of equipment or vehicles.
7. Do not leave the ramp unattended.
8. Ramp surfaces will have less traction when wet - use caution.
9. Always fold and secure the ramp before carrying.
10. Always follow manufacturers recommendations for chair or scooter.
11. Do not exceed a 1 in 6 gradient.

## Warranty:

Your Ramp is under warranty to be free from defects in material and workmanship for one year from date of purchase. This warranty expresses our confidence in the workmanship and materials used for our products.

In the event of a defect covered by this warranty, CareCo will, at our discretion, replace the product or supply parts to remedy. This warranty does not cover device failure due to owner misuse or negligence, or due to normal wear and tear. The warranty does not extend to non-durable parts, such as rubber accessories, which are subject to normal wear and tear and require periodic replacement. If you have any queries please contact CareCo.

### **Authorised Distributor:**

---

CareCo, Hubert Road, Brentwood,  
Essex CM14 4JE  
[www.careco.co.uk](http://www.careco.co.uk)



## MS09113.06 - 6ft Clever Multi-Fold Ramp

### User Instructions:

#### Product Specifications (MS09113.06)

Max Weight Capacity	270kg
---------------------	-------

1. To determine the length of ramp for your application, first you need to determine the rise. The rise is the vertical measurement between the ground and where the top of the ramp is going to sit.
2. A 1:6 slope (9.5 degree) is an acceptable grade for portable ramps used by occupied chairs and scooters with a qualified assistant. i.e. For a 1ft rise you need a 6ft ramp, for a 1.5ft rise you will need a 9ft ramp etc.
3. This ramp is designed to assist persons to travel on a small incline while using a wheeled walker or wheelchair.

### Operation Guidance:

1. Loading the wheelchair
  - Position the wheelchair in the direction of the ramp with the front wheels forward. Roll or ride the wheelchair slowly and steadily up the ramp, ensuring that the wheels follow the centre of the ramp
  - Take extra care in wet conditions to ensure the wheels do not slide on the ramp
2. Unloading the wheelchair
  - Position the ramp directly behind the rear wheel of the wheelchair. Allow the wheelchair to roll backwards down the ramp, ensuring the wheels follow the centre of the ramp
  - Always have a qualified assistant present when using the ramp.

### Maintenance:

1. It is the user's responsibility to check the loading ramp and components before each and every use. If the ramp is damaged, it should NOT be used.
2. Maintain the ramp by regular cleaning. Periodically lubricate the hinges.

## Assembly:

1. Consideration must be taken if the ground is not level and slopes away from the rise where the ramp will be placed.
2. All ramps should be used only with assistance of a knowledgeable and capable caregiver.
3. Never exceed the rated capacity of your ramp.
4. Use caution at all times when loading and unloading.
5. Only load and unload on a stable and level surface.
6. Never stand in the path of equipment or vehicles.
7. Do not leave the ramp unattended.
8. Ramp surfaces will have less traction when wet - use caution.
9. Always fold and secure the ramp before carrying.
10. Always follow manufacturers recommendations for chair or scooter.
11. Do not exceed a 1 in 6 gradient.

## Warranty:

Your Ramp is under warranty to be free from defects in material and workmanship for one year from date of purchase. This warranty expresses our confidence in the workmanship and materials used for our products.

In the event of a defect covered by this warranty, CareCo will, at our discretion, replace the product or supply parts to remedy. This warranty does not cover device failure due to owner misuse or negligence, or due to normal wear and tear. The warranty does not extend to non-durable parts, such as rubber accessories, which are subject to normal wear and tear and require periodic replacement. If you have any queries please contact CareCo.

### **Authorised Distributor:**

---

CareCo, Hubert Road, Brentwood,  
Essex CM14 4JE  
[www.careco.co.uk](http://www.careco.co.uk)



## MS09113.07 - 7ft Clever Multi-Fold Ramp

### User Instructions:

#### Product Specifications (MS09113.07)

Max Weight Capacity	270kg
---------------------	-------

1. To determine the length of ramp for your application, first you need to determine the rise. The rise is the vertical measurement between the ground and where the top of the ramp is going to sit.
2. A 1:6 slope (9.5 degree) is an acceptable grade for portable ramps used by occupied chairs and scooters with a qualified assistant. i.e. For a 1ft rise you need a 6ft ramp, for a 1.5ft rise you will need a 9ft ramp etc.
3. This ramp is designed to assist persons to travel on a small incline while using a wheeled walker or wheelchair.

### Operation Guidance:

1. Loading the wheelchair
  - Position the wheelchair in the direction of the ramp with the front wheels forward. Roll or ride the wheelchair slowly and steadily up the ramp, ensuring that the wheels follow the centre of the ramp
  - Take extra care in wet conditions to ensure the wheels do not slide on the ramp
2. Unloading the wheelchair
  - Position the ramp directly behind the rear wheel of the wheelchair. Allow the wheelchair to roll backwards down the ramp, ensuring the wheels follow the centre of the ramp
  - Always have a qualified assistant present when using the ramp.

### Maintenance:

1. It is the user's responsibility to check the loading ramp and components before each and every use. If the ramp is damaged, it should NOT be used.
2. Maintain the ramp by regular cleaning. Periodically lubricate the hinges.

## Assembly:

1. Consideration must be taken if the ground is not level and slopes away from the rise where the ramp will be placed.
2. All ramps should be used only with assistance of a knowledgeable and capable caregiver.
3. Never exceed the rated capacity of your ramp.
4. Use caution at all times when loading and unloading.
5. Only load and unload on a stable and level surface.
6. Never stand in the path of equipment or vehicles.
7. Do not leave the ramp unattended.
8. Ramp surfaces will have less traction when wet - use caution.
9. Always fold and secure the ramp before carrying.
10. Always follow manufacturers recommendations for chair or scooter.
11. Do not exceed a 1 in 6 gradient.

## Warranty:

Your Ramp is under warranty to be free from defects in material and workmanship for one year from date of purchase. This warranty expresses our confidence in the workmanship and materials used for our products.

In the event of a defect covered by this warranty, CareCo will, at our discretion, replace the product or supply parts to remedy. This warranty does not cover device failure due to owner misuse or negligence, or due to normal wear and tear. The warranty does not extend to non-durable parts, such as rubber accessories, which are subject to normal wear and tear and require periodic replacement. If you have any queries please contact CareCo.

### **Authorised Distributor:**

---

CareCo, Hubert Road, Brentwood,  
Essex CM14 4JE  
[www.careco.co.uk](http://www.careco.co.uk)